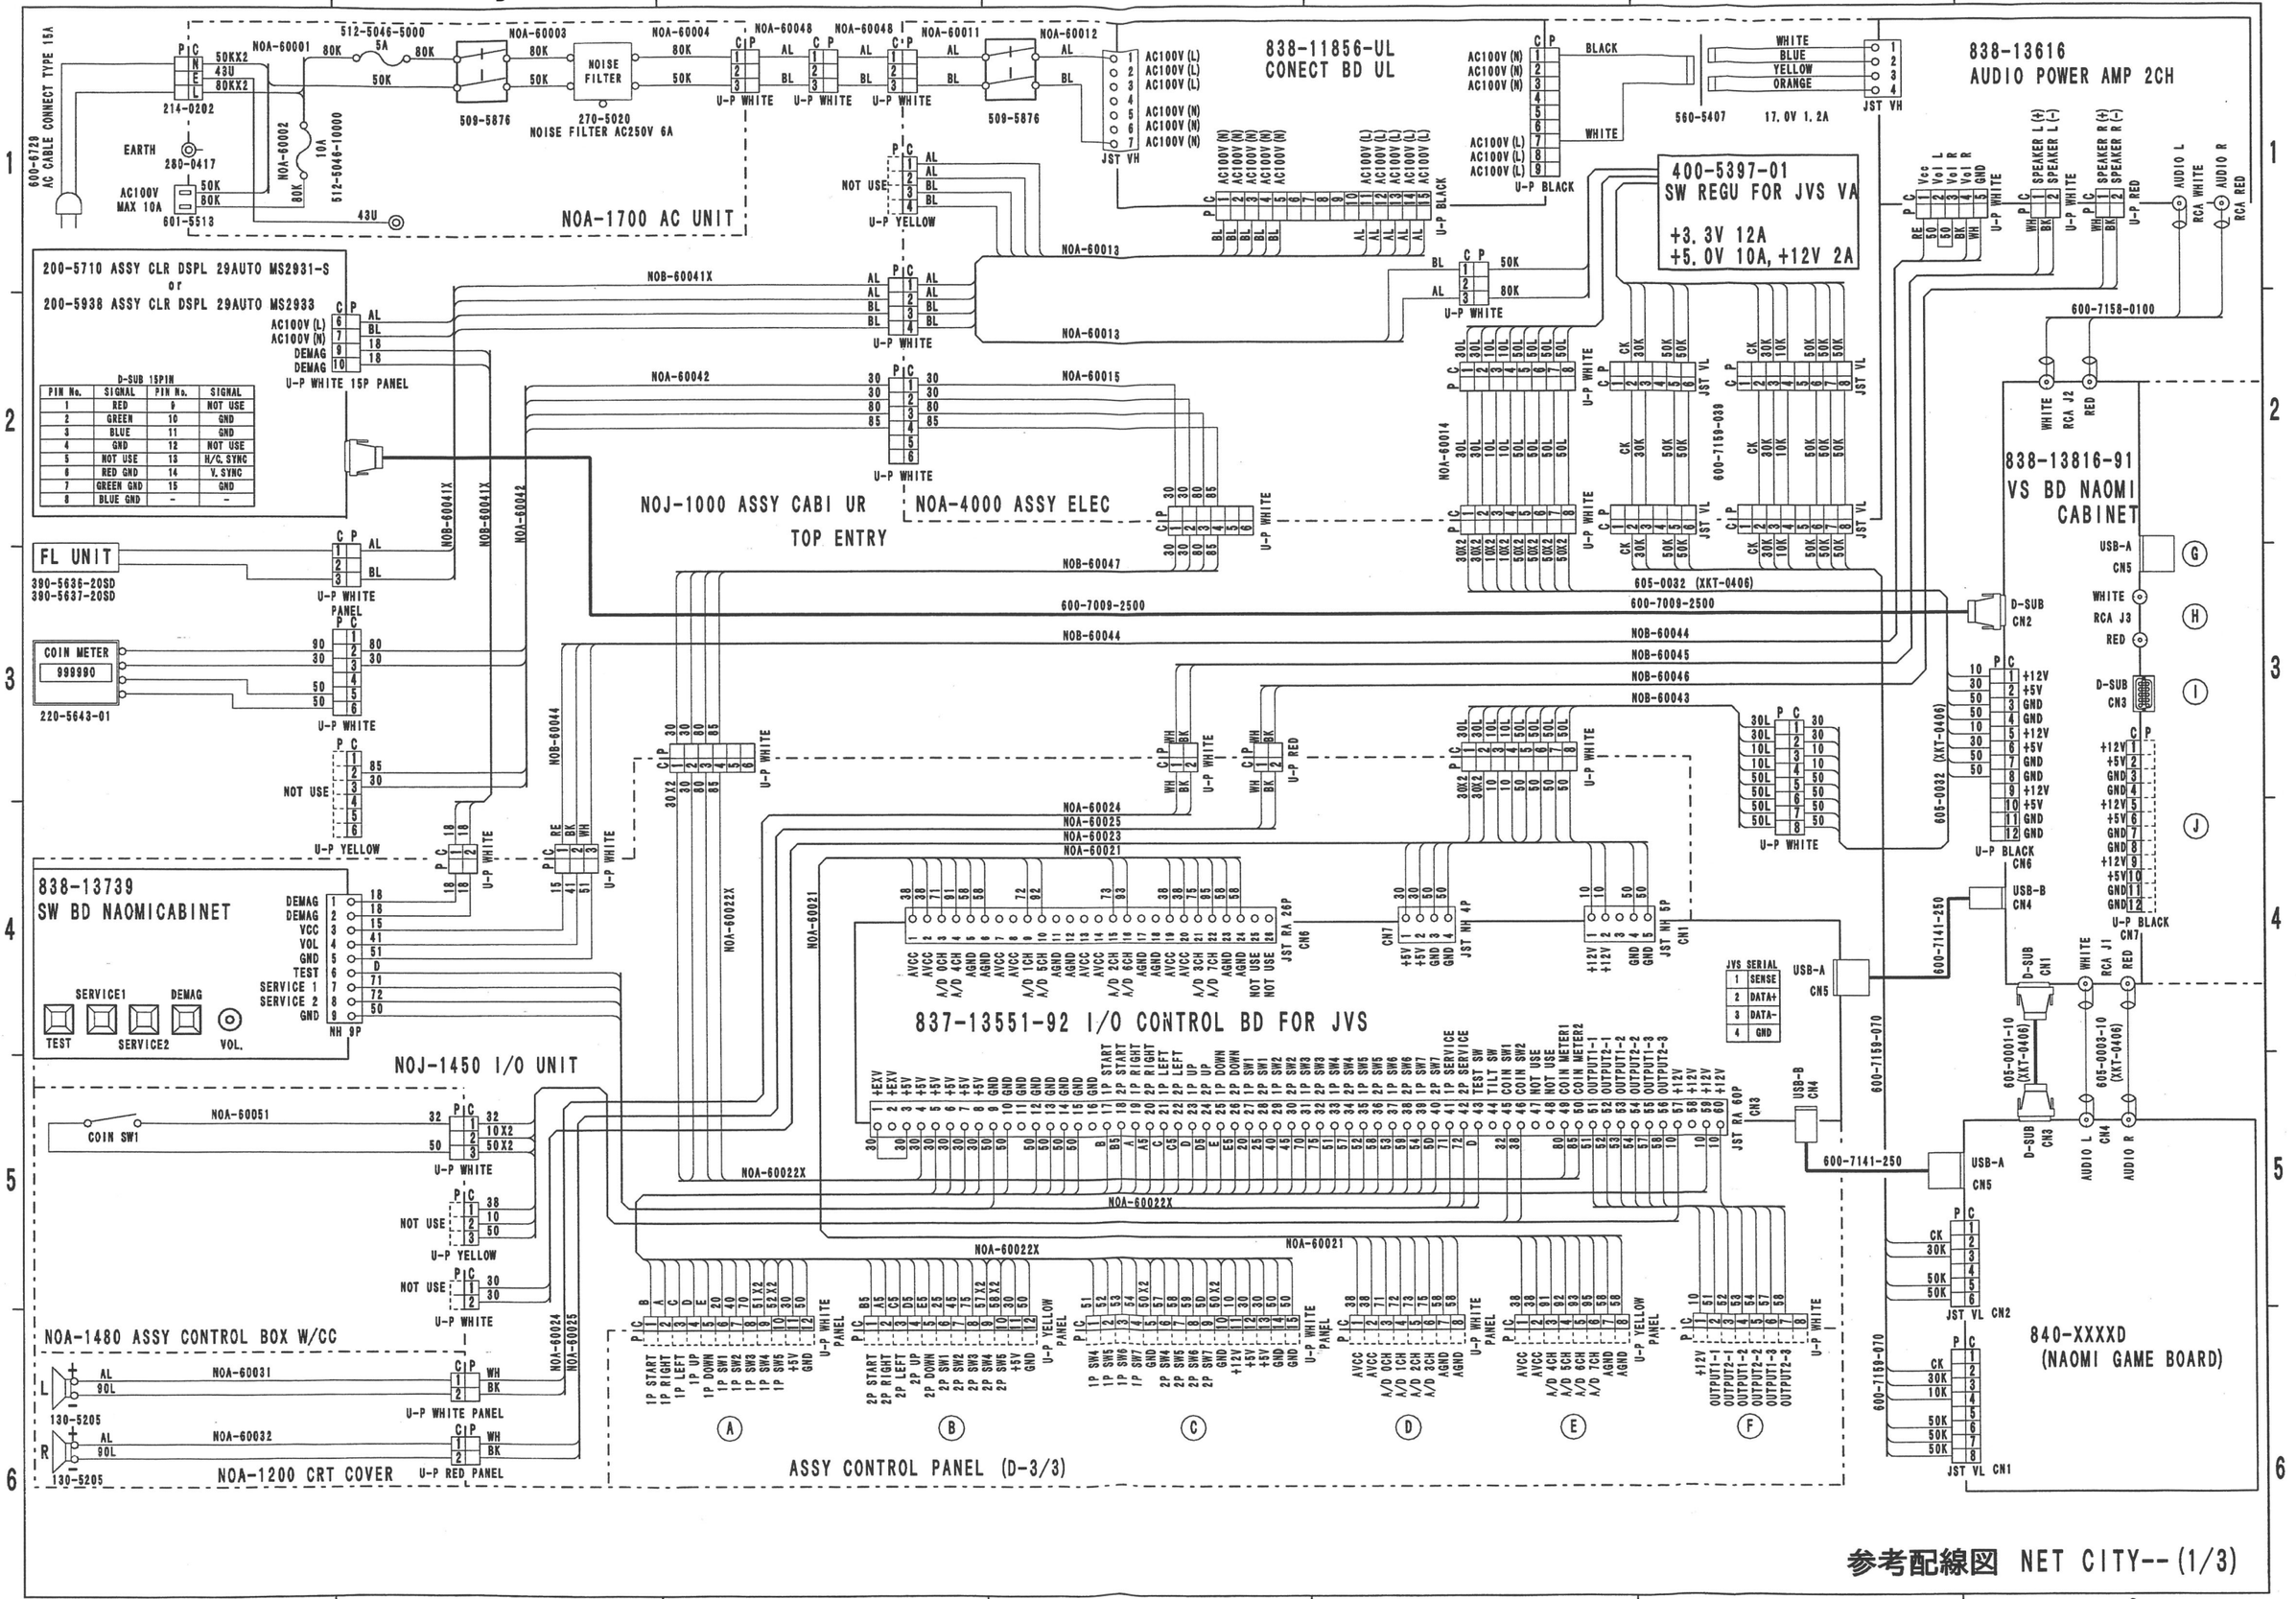

NOA-1700 AC UNIT
NOJ-1000 ASSY CABI UR
TOP ENTRY
NOA-4000 ASSY ELEC
838-11856-UL
CONECT BD UL
838-13616
AUDIO POWER AMP 2CH
400-5397-01
SW REGU FOR JVS VA
+3.3V 12A
+5.0V 10A, +12V 2A
838-13816-91
VS BD NAOMI
CABINET
840-XXXXD
(NAOMI GAME BOARD)
837-13551-92 I/O CONTROL BD FOR JVS
838-13739
SW BD NAOMICABINET
NOJ-1450 I/O UNIT
NOA-1480 ASSY CONTROL BOX W/CC
NOA-1200 CRT COVER
ASSY CONTROL PANEL (D-3/3)
FL UNIT
COIN METER
200-5710 ASSY CLR DSPL 29AUTO MS2931-S
or
200-5938 ASSY CLR DSPL 29AUTO MS2933
D-SUB 15PIN
PIN No. | SIGNAL | PIN No. | SIGNAL
1 | RED | 9 | NOT USE
2 | GREEN | 10 | GND
3 | BLUE | 11 | GND
4 | GND | 12 | NOT USE
5 | NOT USE | 13 | H/C. SYNC
6 | RED GND | 14 | V. SYNC
7 | GREEN GND | 15 | GND
8 | BLUE GND | - | -
SERVICE1
DEMAG
TEST
SERVICE2
VOL.
JVS SERIAL
1 SENSE
2 DATA+
3 DATA-
4 GND
参考配線図 NET CITY--(1/3)

800-6729
AC CABLE CONNECT TYPE 15A

NOA-1700 AC UNIT

838-11856-UL
CONECT BD UL

838-13616
AUDIO POWER AMP 2CH

400-5397-01
SW REGU FOR JVS VA
+3.3V 12A
+5.0V 10A, +12V 2A

200-5710 ASSY CLR DSPL 29AUTO MS2931-S
or
200-5938 ASSY CLR DSPL 29AUTO MS2933

D-SUB 15PIN			
PIN No.	SIGNAL	PIN No.	SIGNAL
1	RED	9	NOT USE
2	GREEN	10	GND
3	BLUE	11	GND
4	GND	12	NOT USE
5	NOT USE	13	H/C. SYNC
6	RED GND	14	V. SYNC
7	GREEN GND	15	GND
8	BLUE GND	-	-

NOJ-1000 ASSY CABI UR
TOP ENTRY

NOA-4000 ASSY ELEC

838-13816-91
VS BD NAOMI
CABINET

FL UNIT
390-5636-20SD
390-5637-20SD

COIN METER
999990
220-5643-01

838-13739
SW BD NAOMICABINET

NOJ-1450 I/O UNIT

837-13551-92 I/O CONTROL BD FOR JVS


NOA-1480 ASSY CONTROL BOX W/CC


NOA-1200 CRT COVER

ASSY CONTROL PANEL (D-3/3)

参考配線図 NET CITY--(2/3)

EARTH WIRING

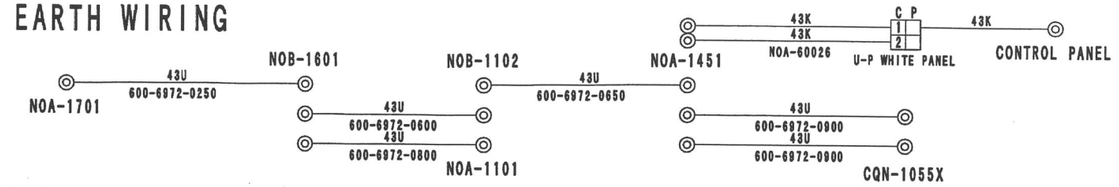

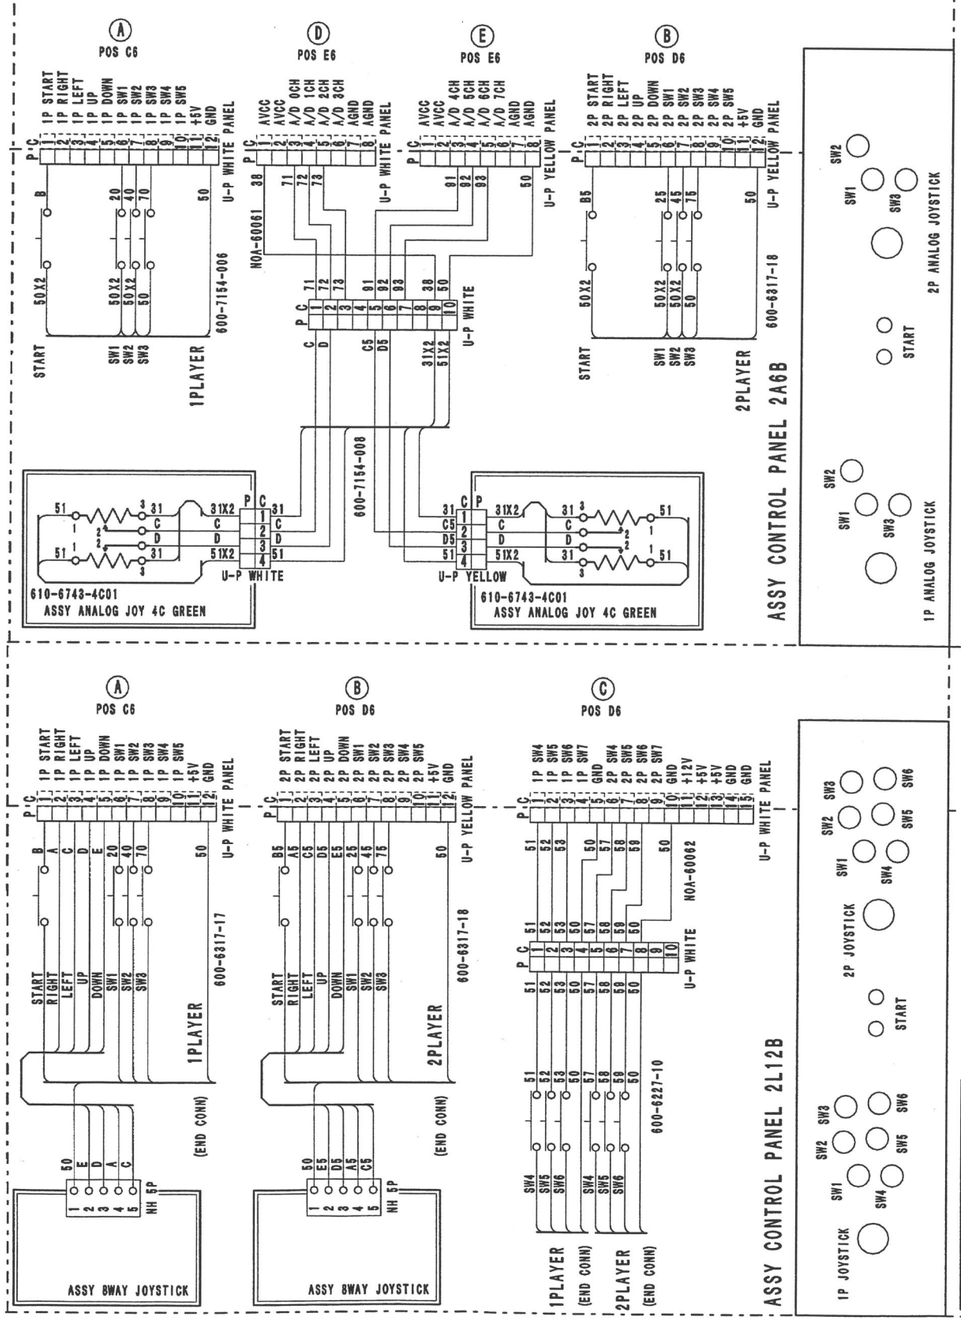

参考配線図 NET CITY--(3/3)